

## SELF TESTING MAINTAINED EMERGENCY ILLUMINATION SIGN WITH WHITE LEDs



### TECHNICAL CHARACTERISTICS (for LED MODULE Specs. see page 3)

<b>CLD-30</b>	
MAINS VOLTAGE	220-240V AC/50-60Hz
MAXIMUM POWER CONSUMPTION	2.7W / 3VA
BATTERY (Ni-MH)	3.6V/1.5Ah
BATTERY PROTECTION	Overcharging and deep discharging protection
INDICATIONS	Charge LED, Lamp Fault LED, Battery Fault LED
RECHARGING TIME	24h
MINIMUM EMERGENCY DURATION	3h
LIGHT SOURCE INTENSITY (230V) / (emerg.)	63lm / 125lm
VIEWING DISTANCE	30m
DEGREES OF COVER PROTECTION	IP40
PRODUCED IN ACCORDANCE WITH	EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3
OPERATION TEMPERATURE RANGE	5 to 40 °C
RELATIVE HUMIDITY	Up to 95%
CONSTRUCTION MATERIALS	Aluminum, Acrylic plate
EXTERNAL DIMENSIONS (LxWxH)	310x240x51mm
TYPICAL WEIGHT	1090gr.
GUARANTEE	3 years (1 year for the battery)

**Thank you for your trust in our products.  
Olympia Electronics - European manufacturer.**

#### GENERAL

These luminaires are used indoors (ta 40°C) where emergency light is needed.

Each luminaire must be permanently connected to mains power supply.

In normal operation the led strip lights and the battery is charging.

In case of a mains power supply failure the luminaire will light the led strip automatically in emergency mode (powered by its battery). When the mains power supply is restored the device turns to normal operation.

#### INSTALLATION

To install the illumination sign you must follow the installation instructions on pages 3,4 and 5.

#### OPERATION

##### Battery Charging

The battery charging is completely controlled. Thereby, the best possible battery maintenance is achieved, as well as the elongation of its duration. When the battery has completely charged, it charges with a maintenance current.

#### Battery Cut-off

The luminaire enters in this operation when the mains power supply fails and battery has lost its energy. During this operation the luminaire enters the idle state and battery consumption is negligible, in order to be protected from deep discharge.

#### Manual Test

This test can be done by pressing the test button. The light source and the emergency circuit of the device is monitored. The manual test can be conducted only if the mains power supply and the battery is connected. During this test period all indication LEDs are OFF.

#### Automatic Operational Test

This test includes all the operations that provide the manual test and is conducted automatically every 15 days. In order to be performed, the mains power supply and the battery should be connected.

#### Automatic Autonomous Test

The Automatic Autonomous Test is conducted and measures the device's back up operation and emergency duration. This test is conducted automatically every 6 months. In order to be performed, the mains power

supply and the battery should be connected and fully charged. If the battery is not fully charged, the test is postponed until the battery is completely charged. If during this test, the autonomy is less than nominal then the battery fault led turned on continuously and the battery must be replaced.

### Back Up Operation

The autonomous duration of battery during emergency mode is at least three hours. During emergency mode, a light source test is also performed.

### Resetting Errors

Push the Test button for more than 5 seconds, to delete all the indicated LED errors. Then the device enters regular operation mode.

### Changing The Operating Mode (maintained or non maintained)

Press and hold the TEST button for more than 5 seconds. The luminaire will erase first the errors (3 LED indicators will light in succession) and after 5 seconds the LED Lamp Fault will remain lit steadily. When the TEST button is released, the luminaire will change between maintained or non maintained mode. The change is recorded permanently in it's memory.

### Indication LED status (with connected mains power supply).

#### Charge

**On:** Good charge condition.

**Off:** No battery (No charging current or disconnected battery).

#### Lamp Fault

**Off:** Good LED strip.

**On (with LED strip off):** Faulty LED strip (must be replaced).

**On (with LED strip on):** Problem in the back up circuit of the LED strip (must be checked by an authorized personnel).


#### Battery Fault


**Off:** Battery OK.

**Blink (With Charge LED ON):** Autonomy or low battery problem (the battery must be replaced).

**Blink (With Charge LED Off):** No charging current or disconnected battery.

## INDICATION LEDs

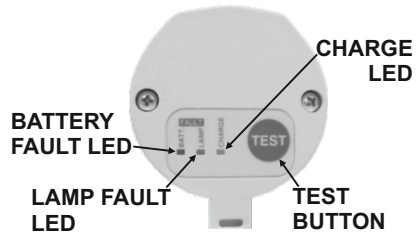

 *The light source contained in this luminaire shall only be replaced by the manufacturer, or his agent, or a similar qualified person.*

*NOTE! The light source is non-user replaceable.*

# INSTALLATION INSTRUCTIONS

## ELECTRICAL CONNECTIONS

- ① Dismantle the luminaire by pushing the lock/unlock button and slide the luminaire to the right and pull it down.
- ② Pass through the cables from the entry hole and connect them as shown on the picture. *The battery must be connected (see the battery installation process on page 5).*
- ③ Place upwards the luminaire and slide it to the left. The lock/unlock button appears indicating that the luminaire is securely installed.
- ④ Power on the device.

## FLAG MOUNTING INSTALLATION (optional)

Install the flag mounting base on the wall (page 4) and perform the respective steps of the electrical connections.

## SURFACE MOUNTING ON A WALL (single sided)

Install the included bracket on the wall (page 4) and perform the respective steps of the electrical connections.



## CEILING INSTALLATION

Install the mounting base on the ceiling (page 4) and perform the respective steps of the electrical connections.

## HANGING INSTALLATION (optional)

Install the mounting base (tube) on the ceiling (page 5) and perform the respective steps of the electrical connections.

**NOTE!! After finishing the installation you must power the luminaire at least for 24 hours for battery charging to perform the nominal autonomy.**

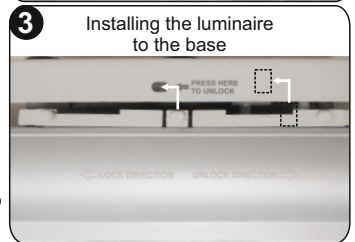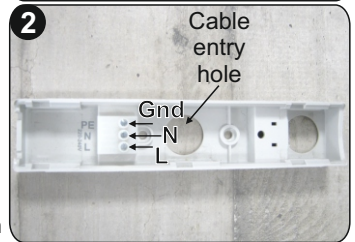

## General:



1. **Operations for installation, maintenance or testing must be done by authorized personnel only.**
2. The device must be connected to the mains power supply through a fuse dependent by the total amount of the line's power load.
3. In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.
4. **It is not allowed to discard batteries in to common trash bins, they must be discarded only in battery recycling points. Do not incinerate.**

## LED MODULE CHARACTERISTICS



LED MODULE CHARACTERISTICS	
CLD-30	
Manufacturer	Olympia electronics
Model Number	1001175/15 LED
Voltage Range	14.5-18V DC
Nominal Power	0.975W
Connections	Plug in connection (take care of orientation between the main pcb and led module)
Temperature (tc)	40 °C max. across the board

# MOUNTING METHODS



## FLAG MOUNTED ON A WALL

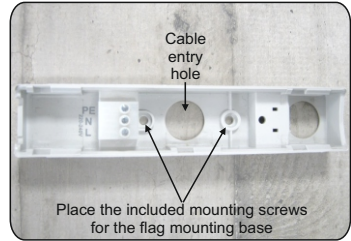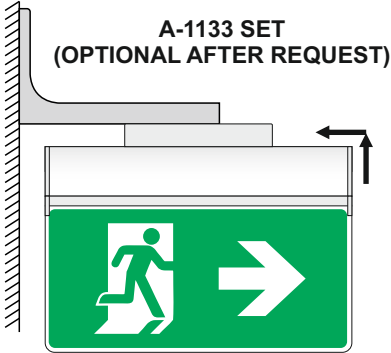



## SURFACE MOUNTING ON A WALL (single side luminaire)

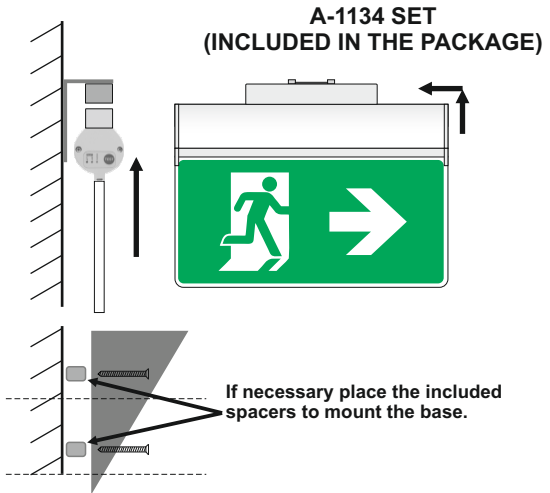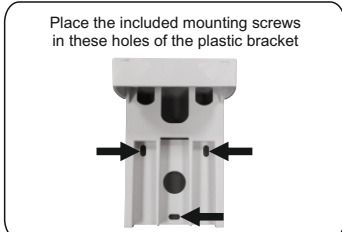

## CEILING MOUNTED

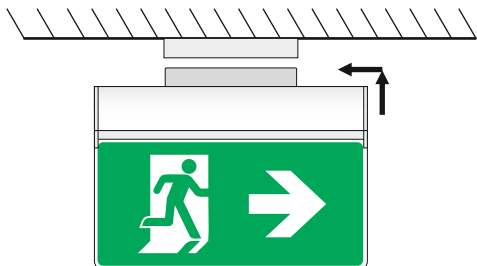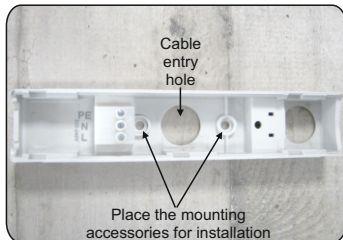


## HANGING INSTALLATION

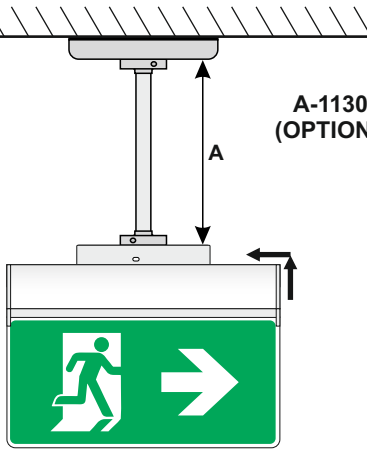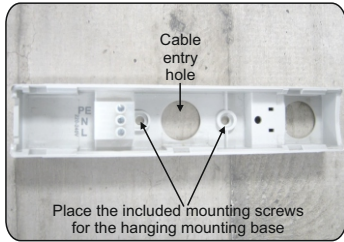

A-1130, A-1131, A-1132 SET  
(OPTIONAL AFTER REQUEST)




	Tube
A-1130	A=1m
A-1131	A=0.5m
A-1132	A=0.25m

 

### GENERAL!!

Measure the distance of the mounting holes and after the drilling place on these spots the mounting plugs and fasten the base with the mounting screws.

## Battery installation and replacement process

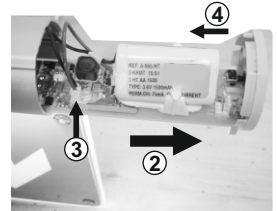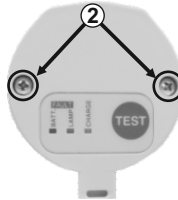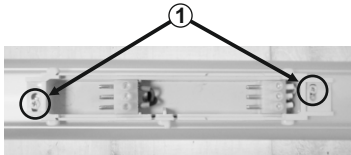

1. Dismantle the luminaire step 1 of the installation instructions (page 3). Unfasten the 2 screws, and gently remove the plastic base from the aluminum profile.
2. Unfasten the 2 screws without moving the marking panel.
3. Slide out carefully the electronic parts. **Be careful to support the marking panel.**
4. Install the battery's connector or replace the battery with a new one with its battery's connector to the appropriate P.C.B connector.
5. Slide in carefully all the electronic parts (*take care of the battery cables*).
6. Refit the marking panel and fasten the removed screws in step 2, and then, the screws of the step 1. Follow the step 3 and 4 of the installation instructions (page 3)

**WARNING!!** Use a maximum torque of 0,5Nm to tighten the screws.

### NOTE!!

In case of battery or light source replacement, these must be replaced by parts of the same type, by the manufacturer or by a competent person.

**NOTE:** LED= Light Emitting Diode

#### LABELING EXPLANATION:

X: Self contained

1: Maintained (\*)

A: Including test device

G: Internally illuminated safety sign

180: 3 hours duration

(\*) Maintained operation: The luminaire lights its illumination source, when it is powered by the mains power supply or not.  
Non Maintained operation: The luminaire lights its illumination source, only in power supply's failure.

## **WARRANTY**

Olympia Electronics guarantees the quality, condition and operation of the goods. The period of warranty is specified in the official catalogue of Olympia Electronics and also in the technical leaflet, which accompanies each product. This warranty ceases to exist if the buyer does not follow the technical instructions included in official documents given by Olympia Electronics or if the buyer modifies the goods provided or has any repairs or re-setting done by a third party, unless Olympia Electronics has fully agreed to them in writing. Products that have been damaged can be returned to the premises of our company for repair or replacement, as long as the warranty period is valid.

Olympia Electronics reserves the right to repair or to replace the returned goods and to or not charge the buyer depending on the reason of defection. Olympia Electronics reserves the right to charge or not the buyer the transportation cost.

### **HEAD OFFICE**

72nd km. O.N.R. Thessaloniki-Katerini  
P.C. 60300 P.O. Box 06 Eginio Pierias Greece

[www.olympia-electronics.gr](http://www.olympia-electronics.gr)

[info@olympia-electronics.gr](mailto:info@olympia-electronics.gr)